

# UTILITIES LOCATION DIAGRAM

## 115-V 20-Amp 60-Hz Self-Timed Unit

**WARNING!**

*This diagram is for reference only! It is not to be used as the sole reference for installation of the SUITMATE® unit.*

