


MOUNTING
FRAME

MAIN
PANEL

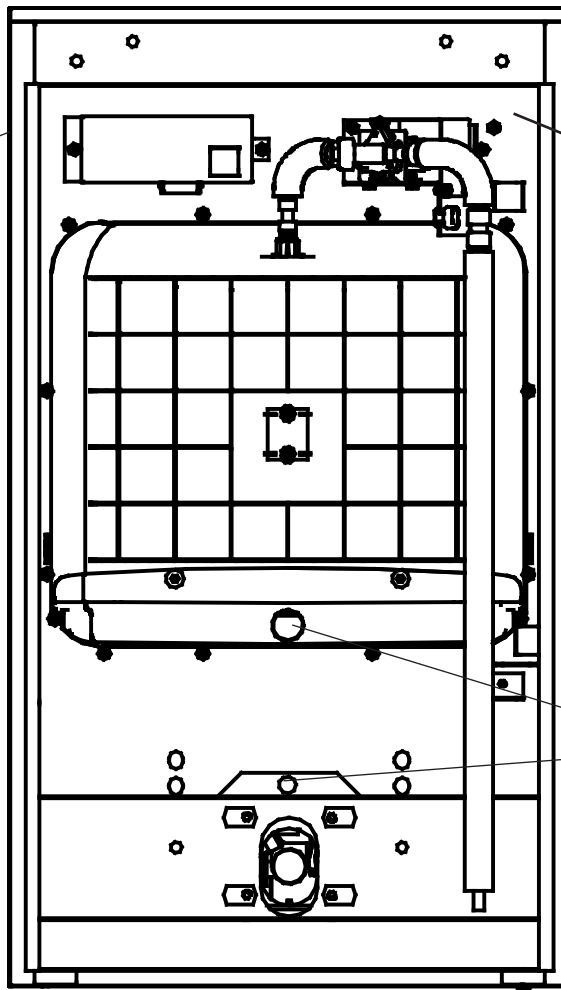

DRAIN
LOCATION

MOUNTING
FRAME

Figure 12


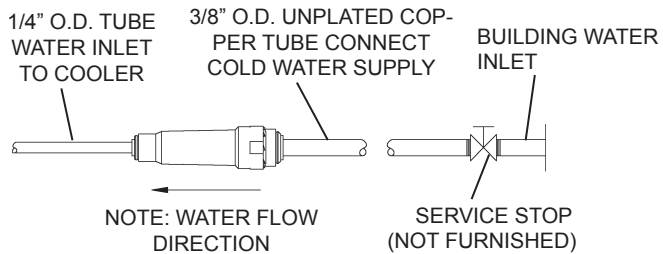


Figure 13 – Water Supply Connections

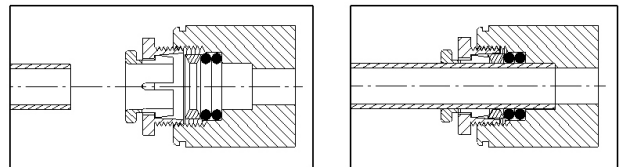

Note: Screw the locknut hand tight to seal

Figure 14

| PARTS LIST | | |
|------------|--------------|----------------------------------|
| ITEM NO | PART NO. | DESCRIPTION |
| 1 | 51546C | Bubbler |
| 2 | 27006C | Basin |
| 3 | 27000C | Lower Shell |
| 4 | 27002C | Fountain Arm (Long) |
| 5 | 26988C | Bottom Cover (Long) |
| 6 | 55840C | Top Plate Actuator |
| 7 | 55836C | Push Arm Actuator |
| 8 | 55839C | Bottom Plate Actuator |
| 9 | 45683C | Drain Tube (Long) |
| 10 | 0000001153 | Reset Switch Bracket |
| 11 | 15005C | Retaining Nut |
| 12 | 56092C | Poly Tubing (Cut To Length) |
| 13 | 1000001940 | Back Panel |
| 14 | 55996C | Strainer |
| 15 | 161570808550 | Slip Nut |
| 16 | 70817C | Fitting - Elbow 1/4 x 1/4 |
| 17 | 111008343890 | Screw - #10-24 x .62 HHSM |
| 18 | 112627543890 | Screw - #10-24X.50 PHTC |
| 19 | 61314C | Regulator |
| 20 | 75560C | Screw - 5/16-18 x 1.00 HHMS |
| 21 | 40045C | Hex Nut |
| 22 | 50986C | Regulator Holder |
| 23 | 51667C | Bumper - Regulator Valve Assy |
| 24 | 28328C | Regulator Mounting Bracket |
| 25 | 70852C | Tee - 3/8 |
| 26 | 36301C | Reset Switch |
| 27 | 0000001144 | Tee - 1/4 x 1/4 x 3/8 |
| 28 | 56372C | Poly Tubing 3/8" (Cut To Length) |
| 29 | 50198C | Snap Bushing |
| 30 | 28327C | Arm - Regulator Activating |
| 31 | 28326C | Arm - Regulator Adjustment |
| 32 | 70856C | Screw - #10-24 x .38 PHMS |
| 33 | 70854C | Rod - Pivot |
| 34 | 27008C | Reaction Bracket |
| 35 | 160270508640 | Strainer Plate |
| 36 | 101570540560 | Drain Gasket |
| 37 | 51575C | Packing Ring |
| 38 | 110346220550 | Drain Nut |
| 39 | 101637451550 | Friction Ring |
| 40 | 161637308640 | Drain Plug |
| 41 | 100023340560 | Waste Tube Gasket |

| BOTTLE FILLER REPLACEMENT PART KITS | | |
|-------------------------------------|----------|----------------------------------|
| ITEM NO. | PART NO. | DESCRIPTION |
| 42 | 98543C | Kit - Electrical Package |
| 43 | 98544C | Kit - EE Sensor |
| 44 | 98545C | Kit - Solenoid Valve Replacement |
| 45 | 98546C | Kit - Aerator Replacement |
| 46 | 98549C | Kit - Hardware & Waterway Parts |

Installation Package

The components for installation are packed in two separate boxes, regardless of the type of unit being installed. The boxes contain the following:

Box No. 1: Wall Frame(s)

Box No. 2: Fountain(s), Arm(s) and Panels

Additional materials, as noted in the Parts List, are also shipped in these boxes.

TROUBLESHOOTING & MAINTENANCE

Orifice Assembly: Mineral deposits on orifice can cause water flow to spurt or not regulate. Mineral deposits may be removed from the orifice by poking with a small round file not over 1/8" diameter, or using a small diameter wire.




CAUTION: DO NOT file or cut orifice material

Stream Regulator: If orifice is clean, regulate flow as in Step 14 of the installation instructions. If replacement is necessary, see parts list for correct regulator part number.

Actuation of Quick Connect Water Fittings: Cooler is provided with lead-free connectors which utilize an o-ring water seal. To remove tubing from the fitting, relieve water pressure, push in on the gray collar while pulling on the tubing. (See Figure 15) To insert tubing, push tube straight into fitting until it reaches a positive stop (approximately 3/4").

OPERATION OF QUICK CONNECT FITTINGS

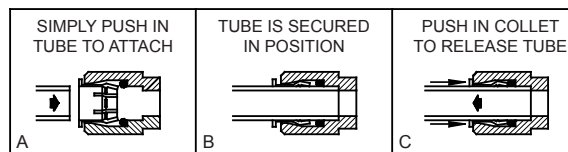

PUSHING TUBE IN BEFORE PULLING IT OUT HELPS TO RELEASE TUBE

Figure 15 – Quick Connect Fittings

Halsey Taylor

2222 CAMDEN COURT
OAK BROOK, IL 60523
630.574.3500

FOR PARTS CONTACT YOUR LOCAL DISTRIBUTOR OR VISIT OUR WEBSITE - WWW.HALSEYTAYLOR.COM

PRINTED IN U.S.A.