

← 250 mm (9-27/32") →


⊕
A

⊕
B


MOUNTING INSTRUCTION

THIS PRODUCTS IS INTENDED FOR
INSTALLATION BY A QUALIFIED ELECTRICIAN


Fix this card on the wall

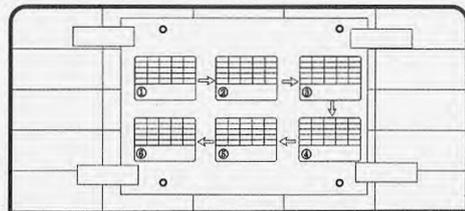


1 FIX THE MOUNTING INSTRUCTION SHEET TO THE WALL WITH HOLES C AND D 130CM FROM THE GROUND.

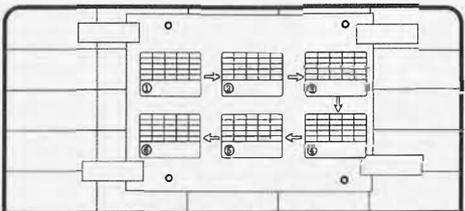


2 DRILL THE FOUR HOLES A, B, C AND D, 8MM DIAMETER, 35MM DEEP.

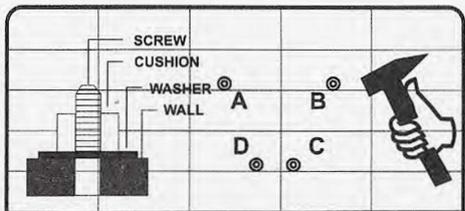


3 REMOVE THE MOUNTING INSTRUCTION SHEET. HAMMER THE DOWELS SUPPLIED INTO THE FOUR HOLES.

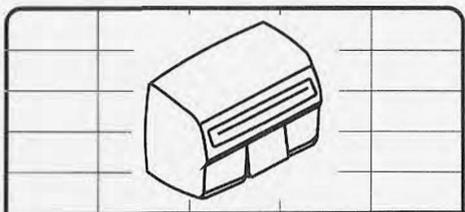

4 REMOVE THE HOUSING FROM THE BASE. PUT THE POWER CORD AT LEAST 7CM THROUGH THE HOLE IN THE BASE PLATE. SECURE THE BASE PLATE TO THE WALL.

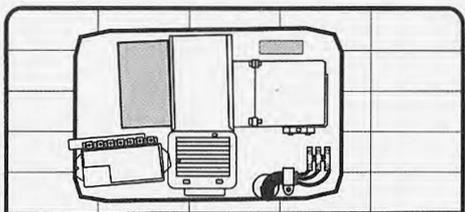

5 CONNECT THE POWER CORD TO THE TERMINAL AND TIGHTEN THE SCREWS. IMPORTANT: DO NOT LIFT THE DRYER BY THE ELECTRICAL PARTS.

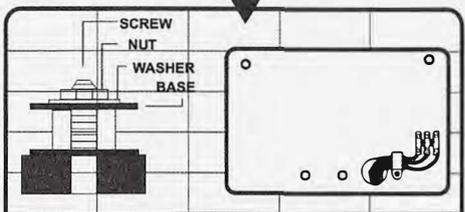

6 INSTALL THE HOUSING BACK TO THE BASE PLATE BY DECLINING 10 DEGREES AND SECURE THE HOUSING IN PLACE.

Important Information

This Product falls within the scope of the Waste Electrical & Electronic Equipment Directive 2002/96 EC. (WEEE)

NOTE: This Product should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice.



158 mm (6-7/32")

22 mm (55/64")

FOR SUPPLY CABLE PREFERRED LOCATION



124 mm (4-7/8")

← 55 mm (2-11/64") →

← 55 mm (2-11/64") →

130CM FROM THE GROUND IS SUITABLE

⊕
D

⊕
C