


250 mm (9-27/32")


MOUNTING INSTRUCTION

THIS PRODUCTS IS INTENDED FOR
INSTALLATION BY A QUALIFIED ELECTRICIAN


Fix this card on the wall

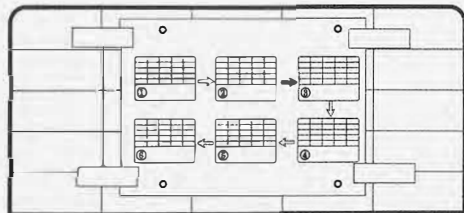


1 FIX THE MOUNTING INSTRUCTION SHEET TO THE WALL WITH HOLES C AND D 130CM FROM THE GROUND.

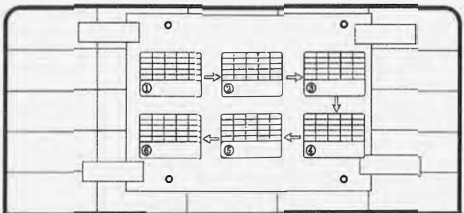


2 DRILL THE FOUR HOLES A, B, C AND D, 8MM DIAMETER, 35MM DEEP.

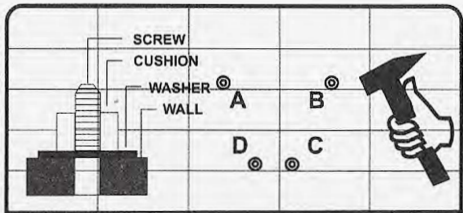


3 REMOVE THE MOUNTING INSTRUCTION SHEET. HAMMER THE DOWELS SUPPLIED INTO THE FOUR HOLES.

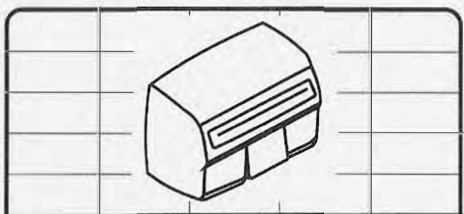

6 INSTALL THE HOUSING BACK TO THE BASE PLATE BY DECLINING 10 DEGREES AND SECURE THE HOUSING IN PLACE.

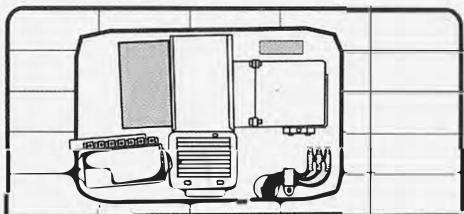

5 CONNECT THE POWER CORD TO THE TERMINAL AND TIGHTEN THE SCREWS. IMPORTANT: DO NOT LIFT THE DRYER BY THE ELECTRICAL PARTS.

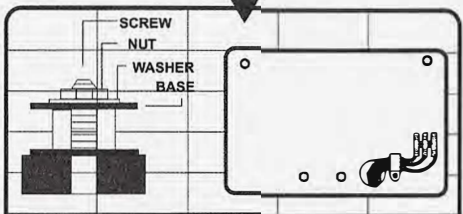

4 REMOVE THE HOUSING FROM THE BASE. PUT THE POWER CORD AT LEAST 7CM THROUGH THE HOLE IN THE BASE PLATE. SECURE THE BASE PLATE TO THE WALL.

Important Information

This Product falls within the scope of the Waste Electrical & Electronic Equipment Directive 2002/96 EC. (WEEE)

NOTE: This Product should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice.



158 mm (6-7/32")

55 mm (2-11/64")

55 mm (2-11/64")

124 mm (4-7/8")

22 mm (5/8")

FOR SUPPLY CABLE PREFERRED LOCATION

130CM FROM THE GROUND IS SUITABLE

