

### PURLEVE REFILL INSTALLATION VIDEO

Please go to the following 'link' of the Pūrleve website to view a brief video covering the Refill Installation process:

<http://www.purleve.com/en/our-product-categories/door-hygiene/product-support/illustration-videos>



A cleaner world is within reach.

111 W. Olive Street, Glendale, WI 53212

1.877.PURLEVE | [www.purleve.com](http://www.purleve.com)

### REFILL RECYCLING INFORMATION

All refill parts are recyclable.




A cleaner world is within reach.

111 W. Olive Street, Glendale, WI 53212

1.877.PURLEVE | [www.purleve.com](http://www.purleve.com)

# pūrleve™

hygienic door handle

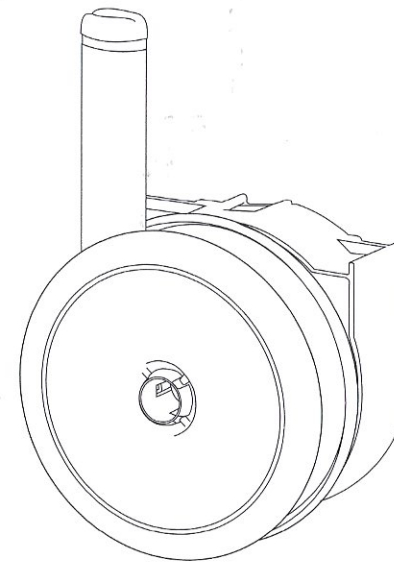

### PURLEVE REFILL INSTALLATION

(Use with Lock or Latch Hygienic Handle - #1002)



A cleaner world is within reach.

111 W. Olive Street, Glendale, WI 53212

1.877.PURLEVE | [www.purleve.com](http://www.purleve.com)

**NOTES:**

- A. Please go to [www.purleve.com](http://www.purleve.com) to view a brief video of the Refill Installation process (<http://www.purleve.com/en/our-product-categories/door-hygiene/product-support/installation-videos>)
- B. If a first time Refill install (no refill in Handle to be replaced), please go to Step #5.
- C. Counting feature must be activated or the indicator Yellow light will blink incorrectly.
- D. The 'counting' function for low refill ONLY works when a NEW and FULL refill is placed. The 'counting' feature will NOT work accordingly (the count will be incorrect) if a less than full REFILL placed.

1. Insert the Pürleve key into cover lock, turn (either direction) and open cover. (Fig. 1)
2. Place the switch to the 'OFF' position. (Fig. 2)
3. Remove the 'Empty / Used' Refill from the dispenser & slide Plastic Handle off the Metal Handle. (Fig. 3)
  - a. Place Refill & Plastic Handle into recycling bin (See 'Refill Recycling Information' on back side)
4. Remove new Refill and Plastic Handle from Pürleve refill box.
5. Hold Plastic Handle in one hand and the Refill in the other (connected by the sleeve). (Fig. 4)
6. Place Plastic Handle with already installed sleeve above the end of Metal Handle. (Fig. 5)
  - a. Plastic Handle Orientation: Printed side of sleeve faces YOU and non printed side faces the door.
7. Place sleeve (that is between the Refill and the Plastic Handle) into the opening (channel) of the Metal Handle. (Fig. 6)
8. Slide Plastic Handle over the Metal Handle until the Plastic Handle 'wing features' mate with the shoulders of the Metal Handle. (Fig. 7)

**NOTE:**

While sliding the Plastic Handle onto the Metal Handle, pull on sleeve (where exits front side of the Plastic Handle) so that the sleeve exiting the Refill and entering the Plastic Handle remains taught.

9. Insert Refill into Dispenser. Refill fits dispenser in only one position (line up plastic ribs of Refill with dispenser). (Fig. 8)

**NOTES:**

- A. Ensure no bunching or jamming of sleeve between top of Refill and bottom of Metal Handle and between bottom of Plastic Handle

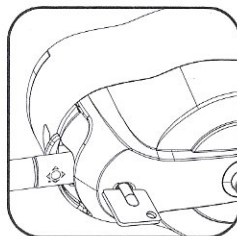


Figure 1

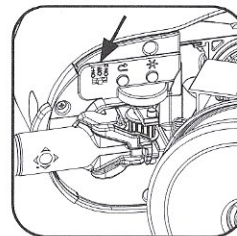


Figure 2

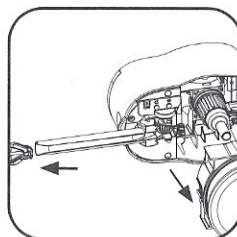


Figure 3

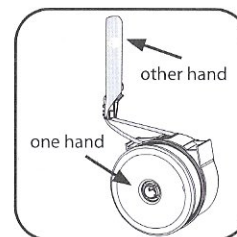


Figure 4

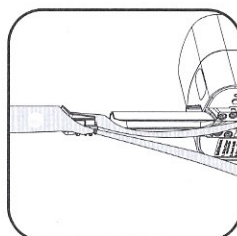


Figure 5

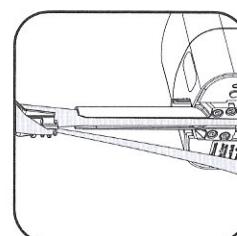


Figure 6

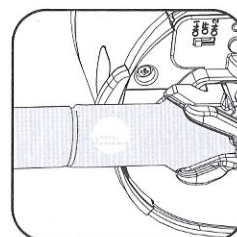


Figure 7

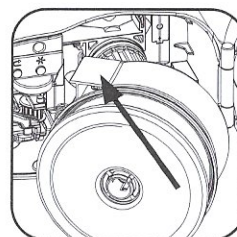


Figure 8

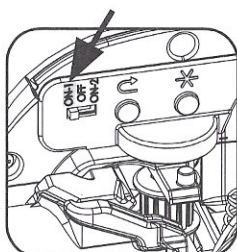


Figure 9

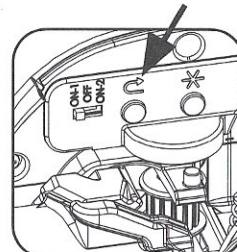


Figure 10

- and where the used sleeves enter Refill. If bunching, pull on sleeve that exits the plastic handle so that the sleeve remains taught.
  - B. If there is a Sticker or Small Tag on the bottom of the Plastic Handle where the sleeve exits, you need to remove BEFORE advancing the refill.
  - C. The Sleeve must be woven into the bottom portion of the plastic handle (Figure 12).
  - D. You can turn the refill cartridge SLOWLY by hand clockwise to ensure there is no binding of the sleeve.
10. Turn 'ON' the dispenser by simply placing the switch to 'ON - 1' if infrared (IR) is required or 'ON - 2' if IR is NOT required.
  11. LOW REFILL Activation Process - To activate the counting of sleeves function, Push Down the lever and release. As the sleeve is advancing press and release the 'ARROW' quickly. The GREEN LED will blink 3X to signify NEW Count. (Fig. 10)
 

**NOTE: Counting feature must be activated with a new refill or the Indicator Yellow Light will blink incorrectly. COUNTING Feature only functions appropriately for NEW and FULL refill.**
  12. Push Down the lever and release to advance the sleeve (repeat until sleeve is tight and no binding/jamming). (Fig. 11)
    - a. Check to ensure the Pürleve logo is facing you (away from door) and that the sleeve has not begun to twist on the Plastic Handle. If twisted, simply rotate the sleeve the opposite direction of 'twist' with your hand on the Plastic Handle. When fixed, Push down the lever and release to advance the sleeve and ensure the twisting does not continue.
    - b. If the sleeve becomes jammed; most likely it has been caught on something in the dispenser. If this occurs, go to Step 2.
  13. Push the Cover to the CLOSED position until you hear and feel a positive 'close'. Visually review the cover fit as related to the dispenser to ensure no excessive gaps. If gaps, push cover until 'snaps' into place.
  14. Verify unit is properly locked by pulling on Cover
  15. Push down the lever and release to 'Test' the sleeve advancement before leaving to ensure handle functions.

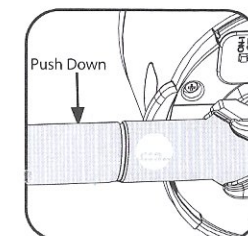


Figure 11

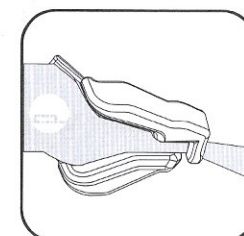


Figure 12